

ITEM NO.	DESCRIPTION	MAN.P/NO.	D&S P/NO.
1	Hole for cable	JHCT052.01.602	NSI
2	Plug		NSI
3	Self-tapping screw	GB846-85 ST2.9X14	NSI
4	Rear cover	JHCT026.21.614	NSI
5	Stator kit	JHCT022.21.044	NSI
6	Sprinkler body	JHCT124.02.603	NSI
7	Shower nozzle	JHCT123.02.603	NSI
8	Down muzzle for shower nozzle	JHCT043.04.603	NSI
9	Shower nozzle body	JHCT124.03.600	NSI
10	Nozzle core	JHCT124.03.601	NSI
11	Up muzzle for shower nozzle	JHCT043.04.602	NSI
12	Sprinkler body	JHCT124.01.601	NSI
13	Shower nozzle	JHCT123.01.601	NSI
14	Sprinkler body	JHCT124.02.601	NSI
15	Shower nozzle	JHCT123.02.601	NSI
16	Gasket seal	JHCT032.02.604	NSI
17	Shower nozzle thread lining	JHCT043.04.600	NSI
18	Output pipe	JHCT130.02.603	NSI
19	Fastening spin parts	JHCT122.01.600	NSI
20	Core	JHCT015.04.600	NSI
21	Seal washer	JHCT032.01.600	NSI
22	O-seal ring	JHCT051.80.008	NSI
23	O-ring	JHCT051.01.635	NSI
NSI - Non stock item available on special order only			

ITEM NO.	DESCRIPTION	MAN.P/NO.	D&S P/NO.
24	Connector	JHCT027.17.600	NSI
25	Rotary knob	JHCT064.01.600	NSI
26	Triple-valve body	JHCT075.01.600	NSI
27	Coupling nut	JHCT029.05.601	NSI
28	Main body	JHCT004.01.607	NSI
29	Self-tapping screw	GB5282.85ST3.5x1	NSI
30	Axle cup	JHCT043.04.630	NSI
31	Shaft	JHCT023.50.606	NSI
32	Stick harness	JHCT054.01.602	NSI
33	Filter cover	JHCT019.01.636	NSI
34	Filter	JHCT019.01.605	NSI
35	O-seal ring	JHCT051.01.636	NSI
36	Impeller cover	JHCT009.01.602	NSI
37	Rotator	JHCT023.49.613	NSI
38	Stanless steel washer	JHCT038.04.611	NSI
39	Base	JHCT006.11.610	NSI
40	Suction cup	JHCT107.01.600	NSI
41	Iron shell	JHCT024.20.601	NSI
42	Outer tooth washer	GB862.23	NSI
43	Earth tag	JHCT041.02.602	NSI
44	Screw	GB818 M3*8-CD	NSI
45	Spring washer	GB9333	NSI
NSI - Non stock item available on special order only			

