


ITEM NO.	DESCRIPTION	MAN.P/NO.	D&S P/NO.
1	Discharge chamber	0700100RP	DS14-1
12	Diffuser	0701200	DS14-12
18	Impeller	0701800	DS14-18
21	Split Cone	0702100	DS14-21
22	Split cone nut	0702200	DS14-22
24	Stop Ring	0702400	DS14-24
32	Neck ring retainer	0703200	DS14-32
34	Strainer	0403400	DS8-34
36	Suction interconnector	0403600	DS8-36
40	Pump shaft/ Coupling-7 stage	070370007	DS14-40
40	Pump shaft/ Coupling- 13 stage	070370013	DS14-40A
40	Pump shaft/ Coupling- 18 stage	070370018	DS14-40B
NSI - Non stock item available on special order only			

ITEM NO.	DESCRIPTION	MAN.P/NO.	D&S P/NO.
40	Pump shaft/ Coupling- 25 stage	070370025	DS14-40C
47	Strap - 7 stage	070470007	NSI
47	Strap - 13 stage	070470013	NSI
47	Strap -18 stage	070470018	NSI
47	Strap -25 stage	070470025	NSI
52	Cable Guard - 7 stage	070520007	NSI
52	Cable Guard - 13 stage	070520013	NSI
52	Cable Guard - 18 stage	070520018	NSI
52	Cable Guard - 25 stage	070520025	NSI
87	Neck Ring	0708700	DS14-87
88	Nut	J04M08	NSI
89	Bearing ring	0708900	NSI
NSI - Non stock item available on special order only			

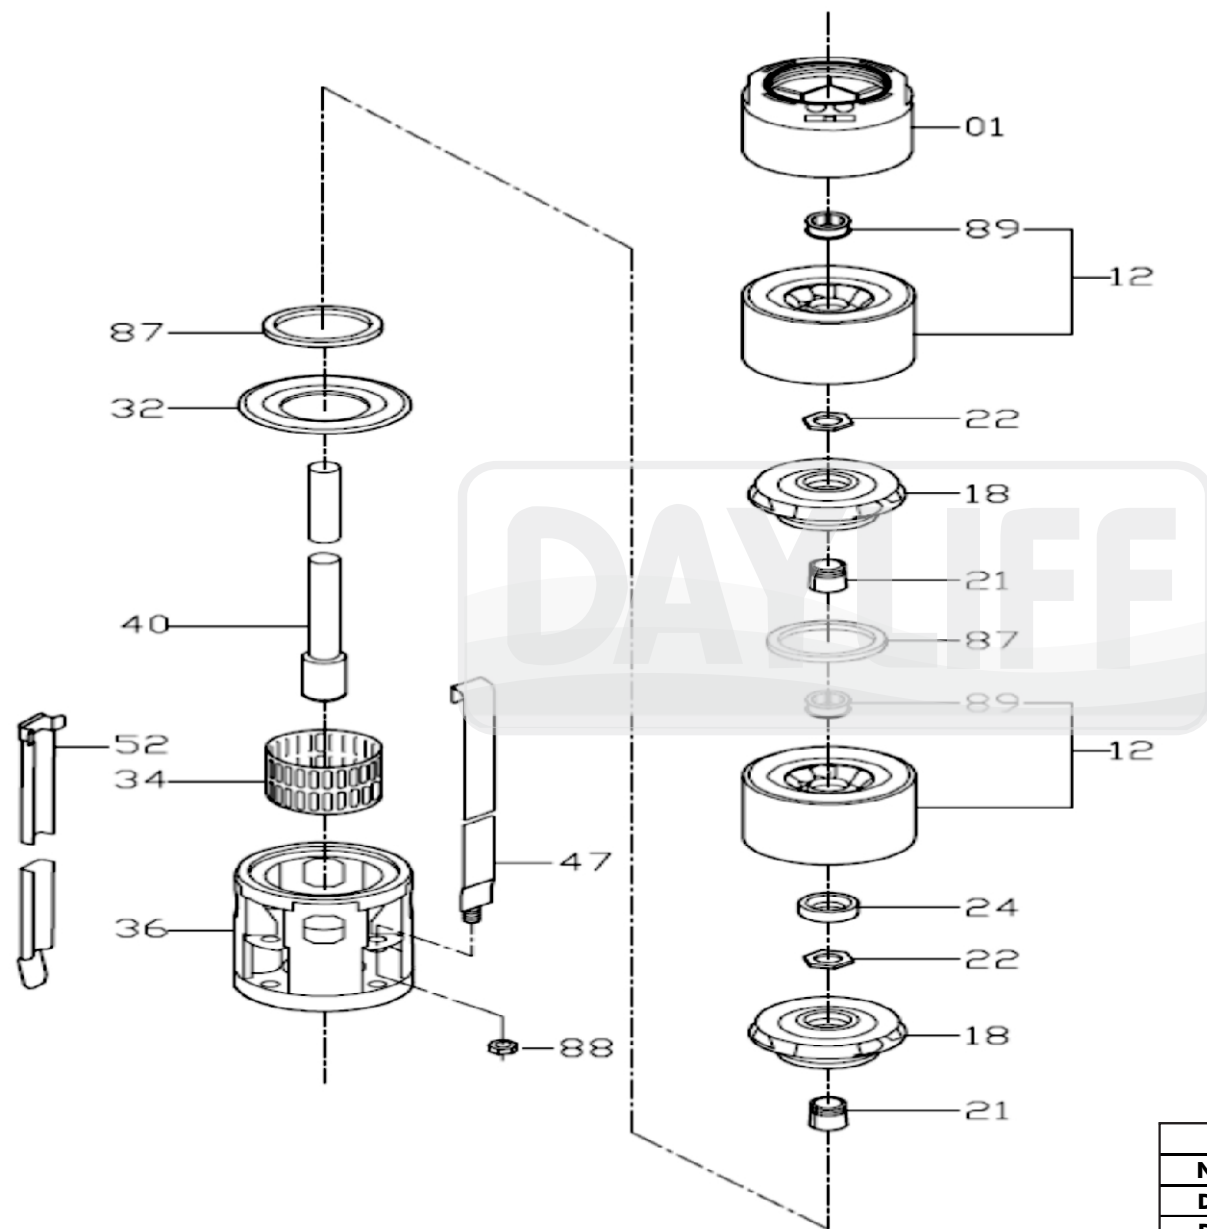

REPAIR KIT DS14			
No.	Description	5STG	10STG
DS14-89	BEARING DS14	5	10
DS14-87	NECK RING DS14	5	10