


ITEM NO.	DESCRIPTION	MAN.P/NO.	D&S P/NO.
1	Discharge chamber	1350100RP	DS30-1
4	Valve cone	0800400	NSI
11	Top Diffuser	1501100	DS30-11
12	Diffuser	1501200	DS30-12
18	Impeller	1501800	DS30-18
19	Ring of Impeller	1501900	NSI
21	Split Cone	1352100	DS30-21
22	Split cone nut	1352200	DS30-22
24	Stop Ring	1352400	NSI
26	Washer for Stop ring	1502600	DS30-26
28	Bottom Diffuser	1502800	DS30-28
32	Neck ring retainer	1503200	DS30-32
34	Strainer	0803400	DS17-34
36	Suct. Interconnector-4"	0803600A0	DS17-36A
36	Suct. Interconnector-6"	0803600	DS17-36B
40	Shaft-8 stage	150400008	DS30-40A
37	Shaft - 13 stage	150370013	DS30-37A
37	Shaft - 17 stage	150370017	DS30-37B

NSI - Non stock item available on special order only

ITEM NO.	DESCRIPTION	MAN.P/NO.	D&S P/NO.
37	Shaft - 21 stage	150370021	DS30-37C
37	Shaft - 26 stage	150370026	DS30-37D
44	Coupling- 8 stage	0804400A0	NSI
44	Coupling - 13-26 stage	1354400	DS30-44
47	Strap - 8 stage	150470008	NSI
47	Strap - 13 stage	150470013	NSI
47	Strap -17 stage	150470017	NSI
47	Strap -21 stage	150470021	NSI
47	Strap - 26 stage	150470026	NSI
52	Cable Guard - 8 stage	150520008	NSI
52	Cable Guard - 13 stage	150520013	NSI
52	Cable Guard - 17 stage	150520017	NSI
52	Cable Guard - 21 stage	150520021	NSI
52	Cable Guard - 26 stage	150520026	NSI
87	Neck Ring	1508700	DS30-87
88	Nut	J01M12	NSI
89	Bearing	1508900	DS30-89
90	Lower bearing	1509000	NSI

NSI - Non stock item available on special order only

4" Motor

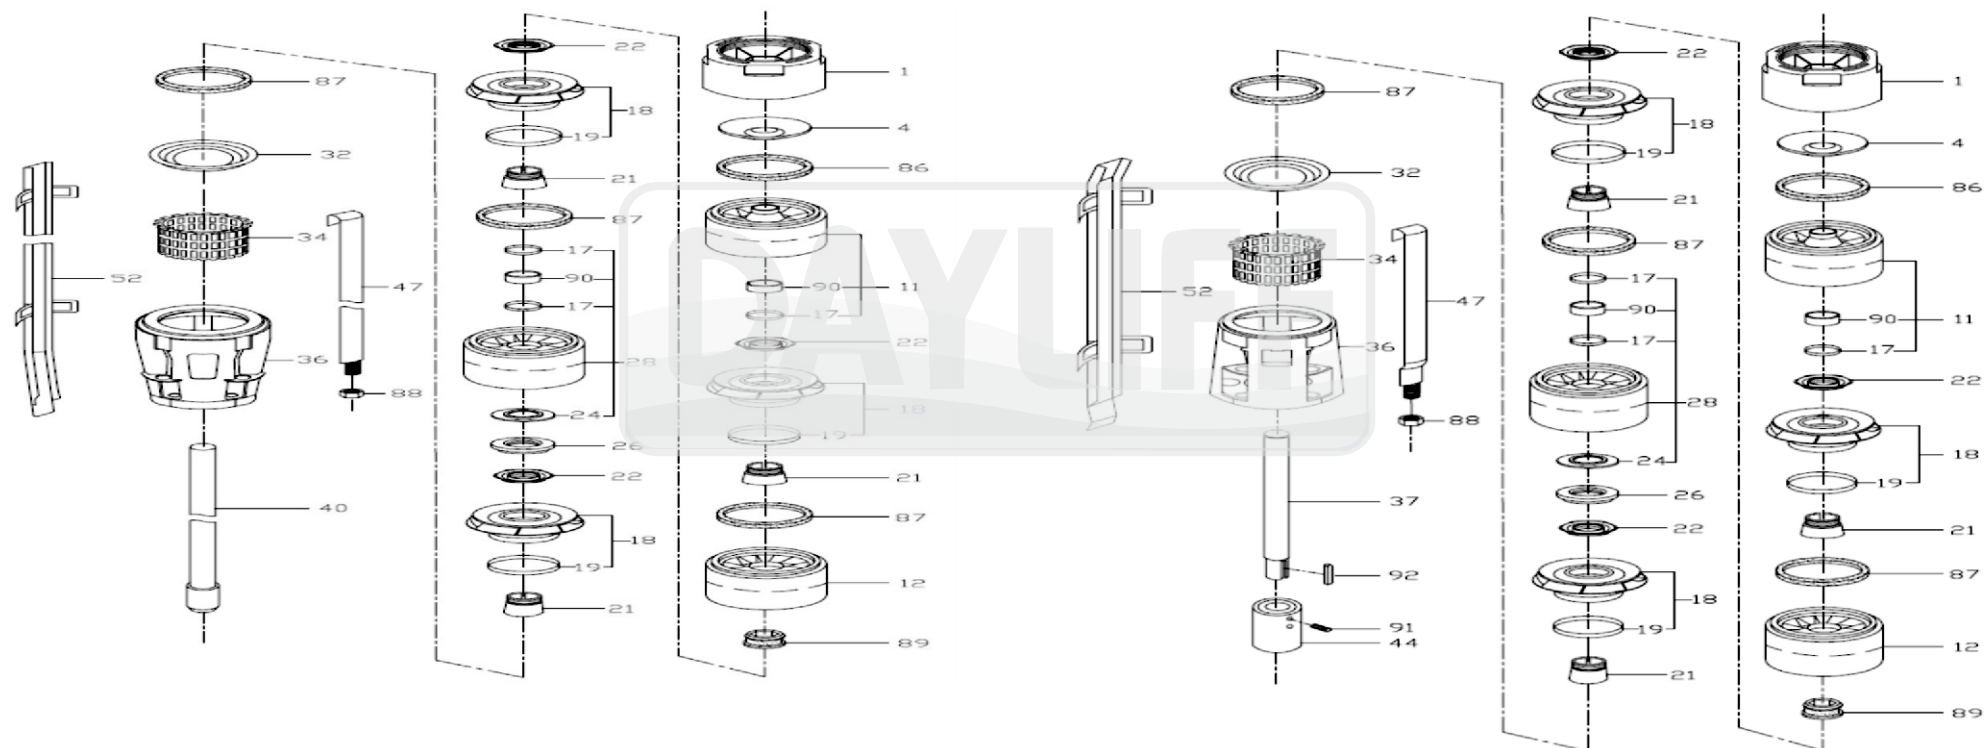

REPAIR KIT DS30			
No.	Description	5STG	10STG
DS30-89	BEARING DS30	5	10
DS30-87	NECK RING DS30	5	10